

System Alarms for SmartMonitor 2

If this light is on	And this condition exists	It means...
Power	Continuous green light, no alarm	Normal operation. The green power indicator light will come on and stay on for as long as the monitor is on.
Charger	Continuous green light, no alarm	Normal operation. The green charger light will come on and stay on while the power cord/battery charger is plugged into an active outlet and connected to the SmartMonitor 2.
Low Battery	Flashing yellow light, continuous alarm	This is the warning that the battery voltage is very low and should be recharged soon. (See <i>Charging the Battery</i> in the manual). Press the RESET button to temporarily silence the alarm. The alarm will resound in 2 minutes if the monitor has not been plugged in. The yellow light will continue to flash.
	Continuous yellow light, continuous alarm	This is a warning that the battery is too low for the SmartMonitor 2 to operate properly. The SmartMonitor 2 must be recharged. Turn the monitor off. Then, recharge the battery. (See <i>Charging the Battery</i> in the manual) If you do not reconnect the charger, the system will automatically shut down.
Memory Full	Flashing yellow light, continuous alarm	When the SmartMonitor 2 Memory Almost Full parameter is reached, the Memory Full light will flash. The alarm will sound continuously. (The alarm will sound only if your dealer programs the monitor to do so at the 50% full or 80% full). Press the reset button to silence the alarm. The light will blink every second. <ul style="list-style-type: none"> • Memory Almost Full is a warning condition. You can continue monitoring. Please contact your dealer to resolve the alarm.
Memory Full	Continuous yellow light, continuous alarm	SmartMonitor 2 memory is 100% full. Press the RESET button to silence the alarm. <ul style="list-style-type: none"> • The alarm will sound only if your dealer programs it to do so. The light will stay on continuously. Then contact your dealer to resolve the alarm. (See also <i>Transferring the Monitor Memory</i> in the manual for more information).
Loose Lead	Continuous yellow light, continuous alarm	The yellow loose lead light and the alarm may sound continuously when there is a problem with any of the following: <ul style="list-style-type: none"> • Lead wires • Electrodes • Electrode belt • Patient cable • Connections between the baby's skin, the electrodes, the lead wires, the patient cables, and the monitor.
Loose Lead	Continuous yellow light and no alarm	If you correct the problem, the alarm will stop. However, the yellow light remains on until you press the RESET button.
Power	Continuous green light, continuous alarm, with no other lights lit	Check the display for error messages. If no error messages, the monitor was turned off improperly causing a sibling alarm. To resolve: <ul style="list-style-type: none"> • Press and hold the blue RESET button. • Press and release the gray POWER button. • Wait 2 seconds then release the RESET button.
All	All lights are blinking and the alarm sounds for 3 seconds and then off for 1 second	Check the display for error messages. If there is an error message, enter it in on you log sheet. Turn the monitor off and then back on. If the monitor functions normally continue to use the monitor.

[Type text]

**If you have any questions or concerns, please call Cook Children's Home Health at (800) 747-8242.
A nurse is available 24 hours a day.**